

bellasonic™  
ADVANCED NAIL GROOMING SYSTEM

## 4-in-1 Electric Nail File Set



MODEL 29000

## IMPORTANT SAFETY INSTRUCTIONS

### PLEASE READ ALL INSTRUCTIONS BEFORE USE!

#### DANGER!

To reduce the risk of electrocution:

1. Do not place or store the power adapter or charging cable where it can fall or be pulled into a tub or sink.
2. Do not place or drop the power adapter or charging cable into water or other liquid. The bellasonic™ nail file is not to be used in water or while hands are wet.
3. Do not reach for a charging nail file that has fallen into water. Carefully unplug immediately.

#### WARNINGS

To reduce the risk of burns, electrocution, fire, or injury to persons:

1. Close supervision is necessary when this product is used by, on, or near children or physically challenged persons.

#### WARNINGS (CONTINUED)

2. Use this product only for its intended use as described in this manual.
3. Do not use attachments provided by any source other than the manufacturer.
4. Keep the cord away from heated surfaces.
5. Never use while sleepy or drowsy.
6. Do not use the charger outdoors.
7. For best performance, please only use the power adapter supplied with the unit.

Never operate the bellasonic™ nail file if it is damaged. Do not use the power adapter with a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.

## PRODUCT INFORMATION

Product name	bellasonic™ 4-in-1 Electric Nail File Set
Charging Voltage	5.0V
Working Current	300-500mA
Motor Speed	4000±10%rpm
Product Size	187x32x32mm
Model No.	29000
Working Voltage	3.7V
Maximum Power	≤2.1W
Battery Specification	DC3.7V / 1000mAh
Charging Time	<4H

© 2019, Bellasonic is a trademark of Jocott Brands, Inc. All Rights Reserved.  
Distributed by: Jocott Brands, Inc.  
Van Nuys, CA 91406 • Made in China  
2NSOCZ-SRT • PATENT NO. 7,188,628  
Powered by TenderTouch Technology

## LIMITED ONE YEAR WARRANTY

bellasonic™ will repair or replace your unit (at our option), free of charge, for 12 MONTHS from the date of purchase if the device is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below, together with your purchase receipt, and \$7.50 USD for postage and handling (personal check or money order payable to "Jocott Brands, Inc."— no cash please).

Paid maintenance is required in the situations below, even within the warranty period, if the damage is due to:

- Incorrect usage or incorrect disassembly/repair.
- Accidental breakage, usage of incorrect charger or exposure to water.
- Commercial use (bellasonic™ is designed for personal use)

#### SERVICE CENTER:

Jocott Brands, Inc.  
Customer Service Department  
8000 Woodley Avenue  
Van Nuys, CA 91406

CustomerService@JocottBrands.com

SHAPE


SMOOTH

4 Easy Steps to  
Naturally Beautiful Nails

BUFF

SHINE

### PARTS LIST

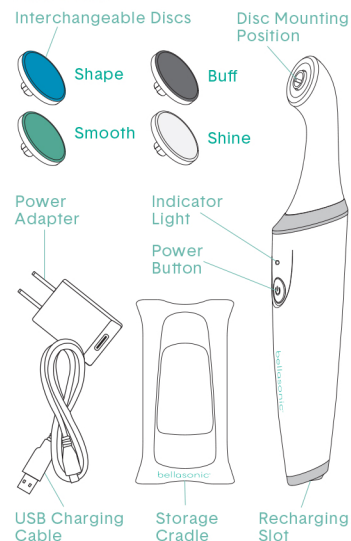

### 4 INTERCHANGEABLE, MULTI-PURPOSE DISCS

	<b>Shaping Disc</b> Files & shapes edges & tips of nails
	<b>Smoothing Disc</b> Smooths nail edges & callused skin
	<b>Buffing Disc</b> Buffs away excess cuticles & smooths nail surface
	<b>Shining Disc</b> Buffs nails to high gloss shine

TAKE CARE NOT TO OVER-SMOOTH OR FILE NAIL SURFACE

### HOW TO USE

1. Start with clean dry hands & nails.
  2. Select the desired disc (see below)  
BLUE: Shapes nails  
GREEN: Smooths nail edges & calloused skin  
GREY: Buffs away excess cuticles & smooths nail surface  
WHITE: Shines nails
  3. Securely place magnetized disc onto device.
  4. Turn the unit on, choosing from two different speeds (see below). Push power button once for low, a second time for high & a third time to turn off.
- 2 POWER SETTINGS**  
LOW: Use for gentle grooming of cuticles & nail surface  
HIGH: Use for quicker shaping & buffing
5. Gently place the cushioned disc to the tip of nails or the nail surface. Discs are rounded, enabling a closer fit to edges of nails & the cuticles. Discs can also smooth away excess cuticles & calloused skin.
  6. When done, turn the unit off & store in the box provided.

### GEL & ACRYLIC NAIL RECOVERY

Can be used to help repair surface damage caused by gel polish & acrylic nails:

To help speed up the gel removal process, glide the shaping disc across the entire surface of nail to break the seal.

### ADDITIONAL NOTES

1. Please use the included DC5V adapter for charging. When charging, the **red light** above the power button will be on. When fully charged, the light will turn **green**.
2. When in use, the **blue light** will be on. When battery is low, the **blue light** will flash, indicating a need to recharge.
3. Please do not use alcohol, detergent, or acid to clean device. Simply wipe with a dry cloth.
4. This product is not waterproof, do not submerge or flush with water.
5. This product is not a children's toy. Please keep it out of reach and away from children.